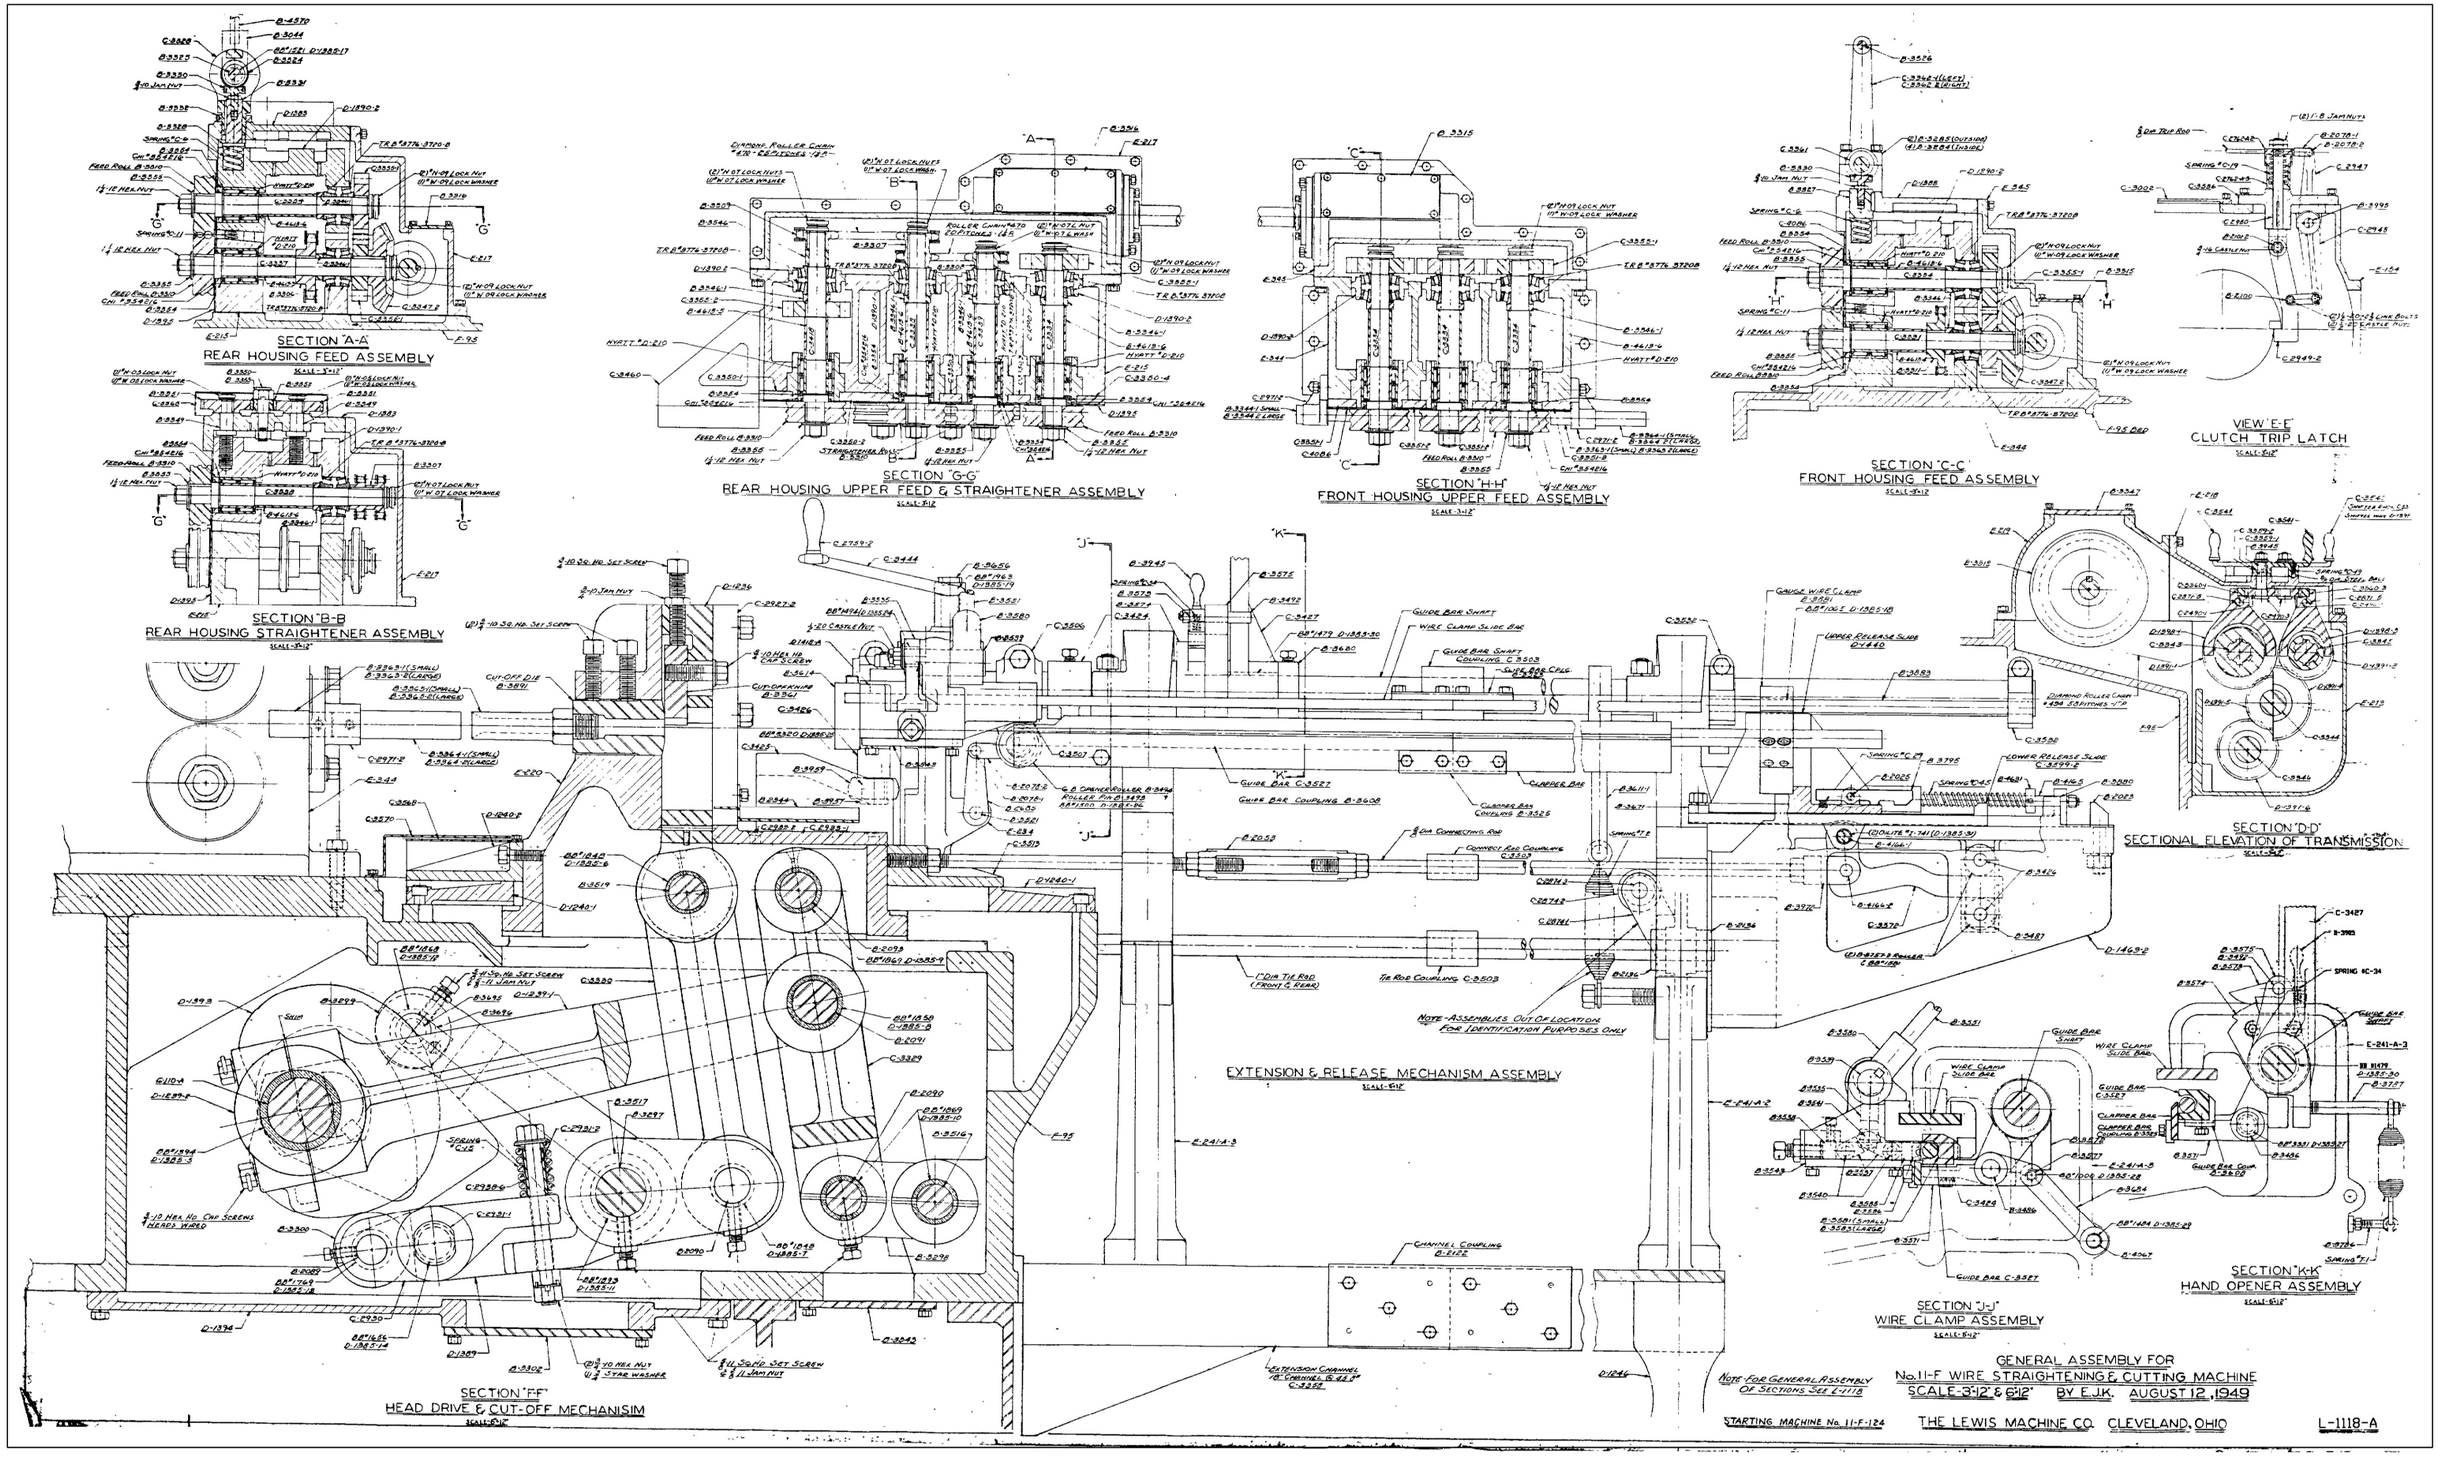
SECTION "A-A"
REAR HOUSING FEED ASSEMBLY
SECTION "B-B"
REAR HOUSING STRAIGHTENER ASSEMBLY
SCALE-3"=12"
SECTION "G-G"
REAR HOUSING UPPER FEED & STRAIGHTENER ASSEMBLY
SCALE-3"=12"
SECTION "H-H"
FRONT HOUSING UPPER FEED ASSEMBLY
SCALE-3"=12"
SECTION "C-C"
FRONT HOUSING FEED ASSEMBLY
SCALE-3"=12"
VIEW "E-E"
CLUTCH TRIP LATCH
SCALE-6"=12"
SECTION "D-D"
SECTIONAL ELEVATION OF TRANSMISSION
SCALE-6"=12"
EXTENSION & RELEASE MECHANISM ASSEMBLY
SCALE-6"=12"
NOTE-ASSEMBLIES OUT OF LOCATION FOR IDENTIFICATION PURPOSES ONLY
SECTION "F-F"
HEAD DRIVE & CUT-OFF MECHANISIM
SCALE-6"=12"
SECTION "J-J"
WIRE CLAMP ASSEMBLY
SCALE-6"=12"
SECTION "K-K"
HAND OPENER ASSEMBLY
SCALE-6"=12"
NOTE-FOR GENERAL ASSEMBLY OF SECTIONS SEE L-1118
GENERAL ASSEMBLY FOR
No. 11-F WIRE STRAIGHTENING & CUTTING MACHINE
SCALE-3"=12" & 6"=12" BY E.J.K. AUGUST 12, 1949
STARTING MACHINE No. 11-F-124
THE LEWIS MACHINE CO. CLEVELAND, OHIO
L-1118-A